



UK Manufacturers of Display Equipment & Partition Screens

Established for over 40 years!

01733 394941

sales@rapind.com

www.rapind.com

Desktop Sneeze Screens



Scan our QR code to
view the product Video




You'll receive x2 poles, x2 washers (2 for each side) & x2 bolts.



Step 1

Before drilling, mark the position of the poles and drill point. Drill through your marked area and add x1 washer to the top of the desk.

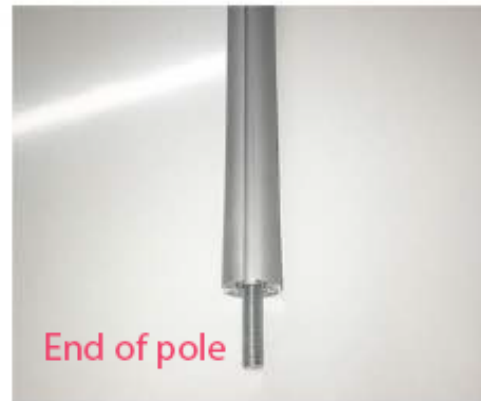

Step 2

Thread the end of the pole through the washer and drilled hole within the desktop.





UK Manufacturers of Display Equipment & Partition Screens

Established for over 40 years!

01733 394941

sales@rapind.com

www.rapind.com



Step 3

Once you have the end of the pole showing through the under side of the desk, place the washer followed by the bolt and fasten until tight.



Step 5

Insert the top corner moulding. Secure into position with a screwdriver.



Step 4

Take a corner fitting and drop down the channel section on the pole, secure with a screw driver. Add Sneeze panel and position on top of the corner fittings.

