

Drill Through Desk Clamps



Scan our QR code to view the product Video



Desk Pins



Desk Screws

Supplied as standard unless upgraded to easy fix clamps

Additional tools:
17mm spanner &
10mm drill



Step 1

Remove the screens from packaging and lay on a flat desk. Place both pins in the holes at the bottom of the screen.




Step 2

Place the screen in the desired position and push down on the desk, ensuring that a mark is left by the pins.



Step 3

When drilling ensure the drill is kept straight to ensure the screen sits correctly.

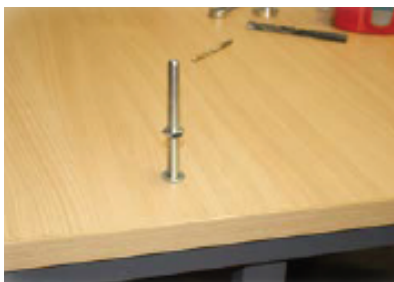


Step 4

Place the screens provided through the desk from the bottom. Add the washer and wind the bolt down until it's flush.



Step 5


Use the 17mm spanner to tighten until secure.

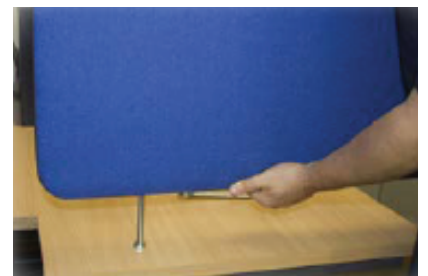

Step 6

Remove the pins from the screen and place the screen onto the screw fitted to the desk. Push down until flush with the desk.

Easy Fix Desk Clamps

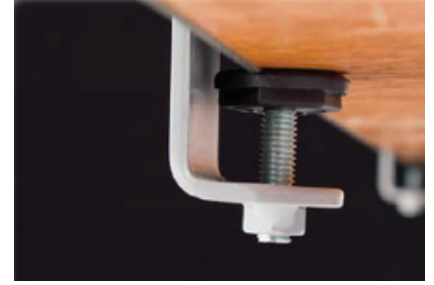

Step 1

Remove the screens from packaging and lay on a flat desk.

Step 2

Slide clamps into the holes at the base of the screen and attach to desk.

Step 3

Place clamps against the desk and adjust to measure the thickness you require.



Step 4

Position the screen flush with the edge of the desk.

Step 5

Once you are happy with the position of the screen, tighten the clamps into place with the supplied allen key.